## Instruction Sheet

# Kit Number: 78591000

### **TIRE CHAIN KIT**



**WARNING: FAILURE TO FOLLOW** 


INSTRUCTIONS could result in personal injury and/or damage to unit.

Read, understand, and follow all safety practices in Operator's Manual before beginning.

### **Package Contents**


Check the contents of your kit for the parts listed below. Also see Figure 1.

Ite	m Description	Qty	Ariens P/N
1	2-Link Spacing Tire Chain (Set of 2)	1	09119000
2	Chain Tensioner (Set of 2)	1	09119500

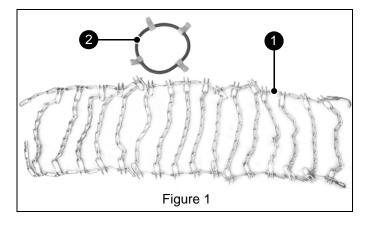


#### Installation

- 1. Stop engine and remove key.
- 2. Wait for all moving parts to stop and for hot parts to cool.
- 3. Place both tire chains (Item 1) on the ground and remove all twists and tangles. Position chains in front of unit with chains centered to tires. See Figure 2.

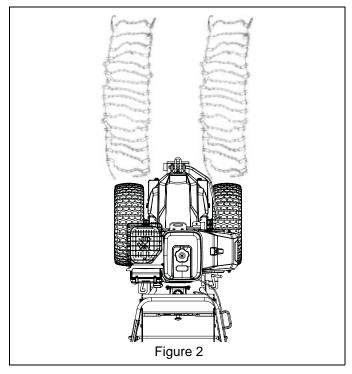

- 4. Move transaxle bypass levers into neutral position.
- 5. Push unit onto tire chains and stop when tires are in the middle of the chains.
- 6. Pull both sides of the tire chains to the top of the tires and connect the inside and outside edge hooks to the chain links that provide the tightest fit.
- Clip the chain tensioners (Item 2) to chain links in a square pattern with the flat side of clips facing out. See Figure 3.

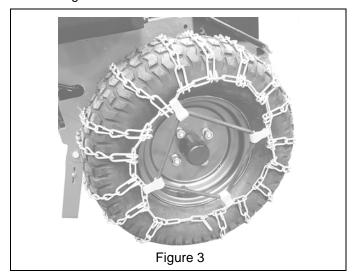

8. Return transaxle bypass levers to operating position.