

# Instruction Sheet

## Kit Number: 72406500

### FRONT WEIGHT KIT



**WARNING: FAILURE TO FOLLOW INSTRUCTIONS** could result in personal injury and/or damage to unit.  
Read, understand, and follow all safety practices in Operator's Manual before beginning.

### Package Contents

Check the contents of your kit for the parts listed below. Also see Figure 1.

Item	Description	Qty	Ariens P/N
1.	Auger Housing Weight	1	03233559
2.	5/16-18" Center Locking Nut	2	06529800
3.	11/32 x 11/16 x 1/16" Flat Steel Washer	4	06437200
4.	Flange Bushing	2	01305900
5.	5/16-18 x 1 1/2" Hex Bolt	2	05952400

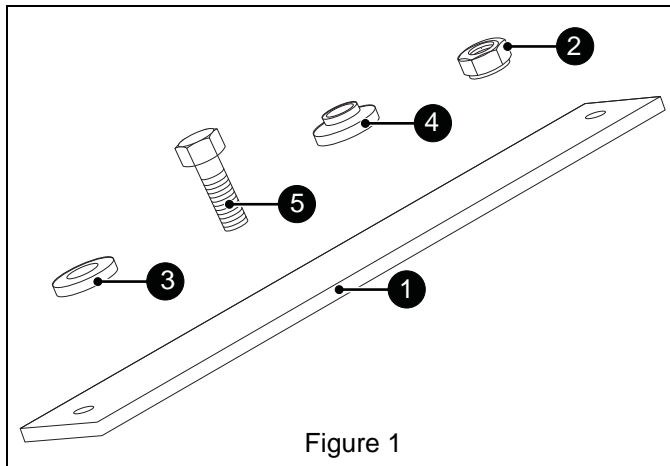


Figure 1

**NOTICE:** Kit is installed in two configurations based on the first three digits of the unit model number, or "series." Check model number and follow applicable installation procedure.

### INSTALLATION

#### For 926, 924, 921 and Some 920-Series Units:

See Figure 2

1. Install one flat steel washer (item 3) onto each hex bolt (item 5). Insert hex bolts through holes in housing top.
2. Install weight (item 1) onto hex bolts.
3. Position stepped-down side of flange bushings (item 4) up and install onto hex bolts and into weight.
4. Secure with two locking nuts (item 2) and tighten hardware.

**NOTICE:** Two remaining flat steel washers are not used in this configuration and may be discarded.

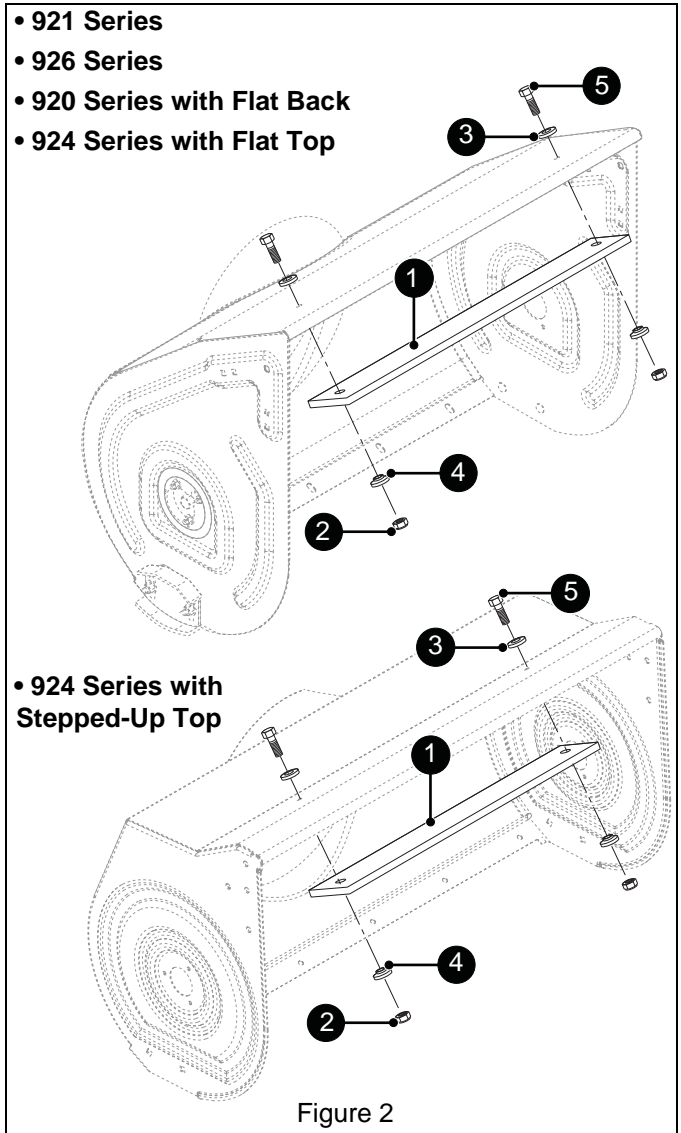


Figure 2

**For 932 and Some 920-Series Units:**

See Figure 3

1. Install one flat steel washer (item 3) onto each hex bolt (item 5). Insert hex bolts through holes in housing top.
2. Insert stepped-down side of flange bushings (item 4) into weight (item 1).
3. Position weight so side with flange bushings is facing up and install weight onto hex bolts.
4. Install remaining flat steel washers onto hex bolts and secure with two locking nuts (item 2).

